

Insys Combilock 200

Please read this manual carefully before using your new code lock.



De Raat


Security Products

Safes, lockers and more...




Opening and closing

1. Enter the six-digit code. At the correct input, a signal is confirmed and the green LED flashes.

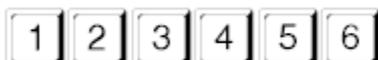

2. After the code has been entered, the lock must be opened within 10 seconds by turning the panel clockwise or the lock will automatically lock.

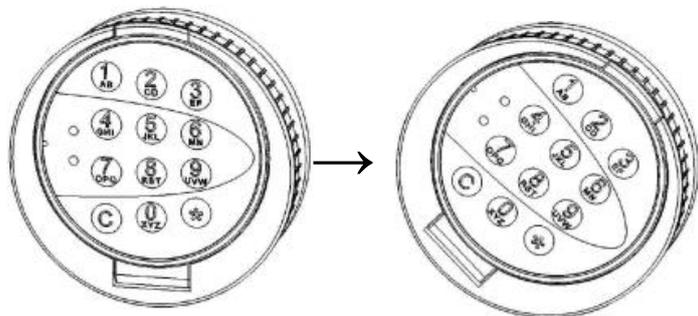

Locked position

Unlocked position




If incorrect code is entered four times in a row, a 10 second blocking period starts.

3. Now the bolt work can be turned up and the door can be opened.

When locking the safe

To lock the safe, close the door properly and turn back the bolt work.

Then turn the panel counterclockwise to the locked position.

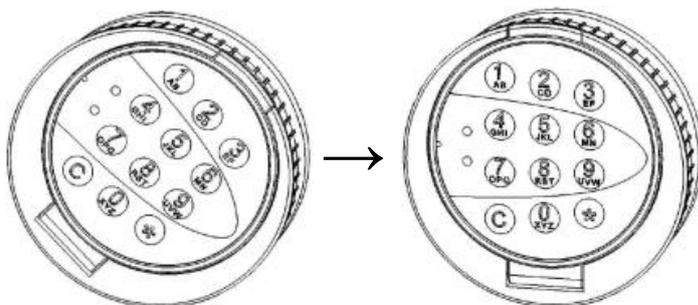

Unlocked position

Locked position



Before leaving the cabinet it is important to turn the panel and the bolt work to ensure that the lock is locked correctly.

